

Loop Link communications interface

5909

- USB connection
- For PReset version 5.0 or higher



Description

- Loop Link 5909 is a communications interfaces for configuration and monitoring of PR electronics' PC-programmable devices.

Application

- Loop Link is used for the configuration of 3114, 4114, 4116, 4131, 4222, 5114, 5115, 5116, 5131, 5223, 5225, 5331, 5333, 5334, 5335, 5343, 5715, 6331, 6333, 6334, 6335, 9113 and 9116. For programming of 3114, 4114, 4116, 4131 and 4222 the ConfigMate 4590 and display / programming front 4501 are also required.

Technical characteristics

- Loop Link 5909 consists of a communication box with USB cable to the PC, necessary cables for connection to the devices, a CD-ROM with the configuration program PReset and an installation manual. The communication box is supplied from the USB port of the PC.

